


C4 70Up Valve Body

D0 to D7 Casting Number
On Valve Body/Channel


LISTEN UP: Install all the end plate bolts
loosely. **LAST THING:** Tighten plate bolts.

1-2 Accumulator




Spring= Softer

1-2 Shift




D2

2-3 Shift




2-12@.740

12OZ@540




1.137x331x032

2-3 Backout




1-12@625

Cutback




1-0@460




940x224x025

2-12@.740




1.521x291x033

1-12@625




1.445x335x026


1-2 Puck




.217 Plastic Ball




PR Valve




Coast Boost



Manual Valve




1.727x659x049




6-0@740

1.360x410x030



1-0@855

Boost



P R N D 2 1


D Starts in 1st and shifts 1-2 & 2-3.
Kickdown to 2nd or 1st, speed dependent.

2 Starts off and stays in 2nd.

1 Starts off and stays in Low [1st]


P
R
N
D
2
1

5-0@767




1.420x325x034


Throttle Boost



Downshift




3-0@490




810x279x030

Low Servo




1-8@535



1.149 x380 x027


6-0@757=160




1.19x29x036

Filter Holds spring.


.217 Plastic Ball





No Ball




LISTEN UP: If this screw hits the case, remove it.

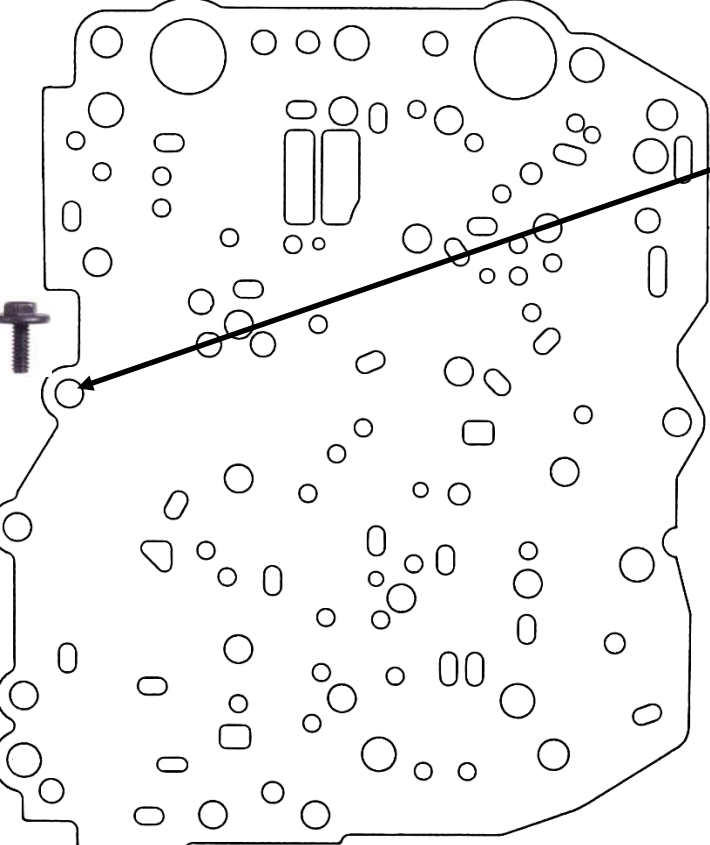

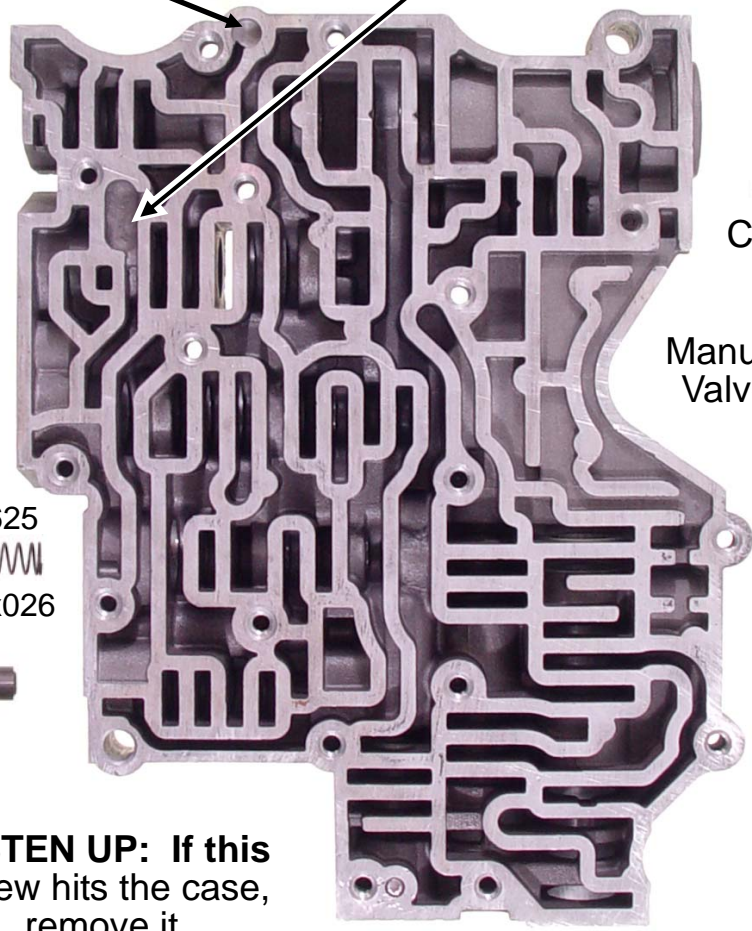

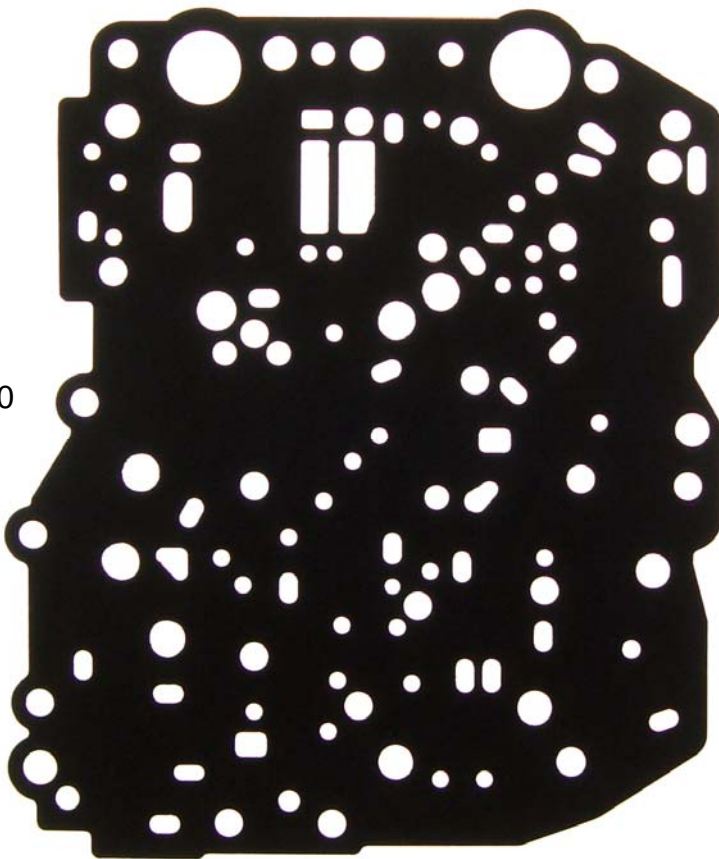

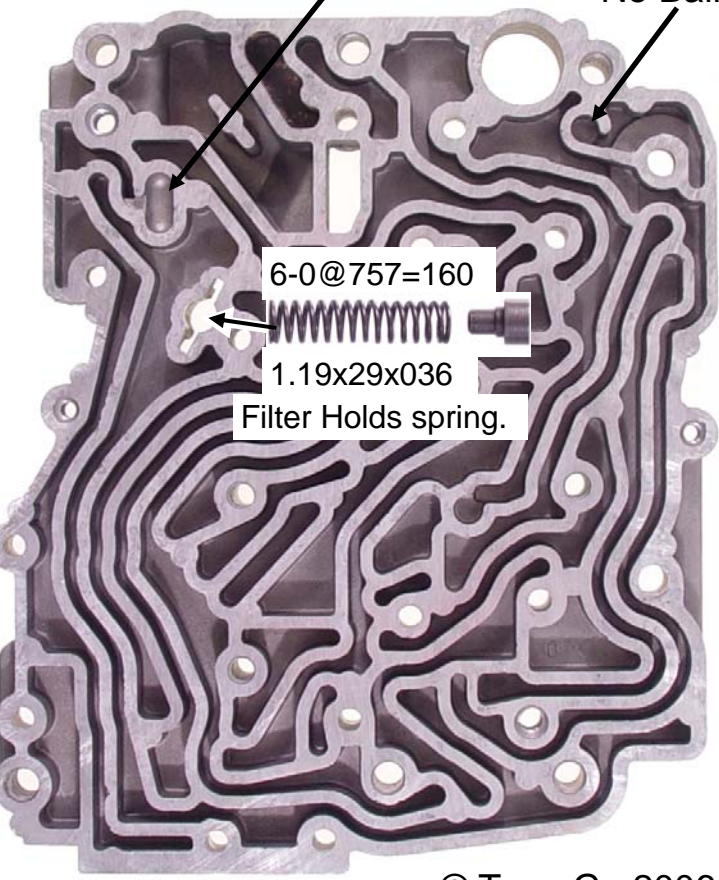

© TransGo 2006